

DX80/DX120 System

Programming System Speed Dials:

1. Press the Feature button # *
2. Enter the Admin password = # # # # # # # # (pound (#) eight times)
3. Press [show]
4. Dial 04091
5. Press [save]
6. Enter the Speed Dial Number you are going to use (500 through 699)
7. Press [show]
8. Press [chg]
9. Enter in the phone number you want as the speed dial number
10. Press [save]
11. If you would like to enter in additional speed dial numbers, press [next] and repeat above – beginning with step 6. If you are done – press the 'On/Off' button to exit out of programming.

Using the System Speed Dials:

1. From any phone – enter the speed dial number (500—699) that you wish to call.