

5. **REPEAT** this procedure in each mode until all default volume levels have been properly set.


Note: You may adjust the volume of a call in any mode (over speaker, headset, handset or group listen), at any time during the call, by pressing VOLUME UP or VOLUME DOWN. When the call ends, the volume of all future calls is reset to the programmed (default) setting.

7.5 Background Music

If the telephone system supplies background music, you can turn it on at your LCD speakerphone while on-hook and idle. The system automatically turns background music off during calls and voice announcements.

- **To turn the music on,**

1. **SELECT OPTIONS.**
2. **SELECT NEXT** until the **MUSIC** option appears.
3. **SELECT MUSIC.**
4. **SELECT ON.**
5. **PRESS SPEAKER** to end (the speaker light turns on when background music is on).
6. **ADJUST** music volume with the volume buttons.

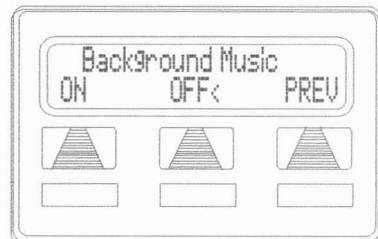

Setting Background Music

- **To turn the music off,**

1. **SELECT OPTIONS.**
2. **SELECT NEXT** until the **MUSIC** option appears.
3. **SELECT MUSIC.**
4. **SELECT OFF.**
5. **PRESS SPEAKER** to end (the speaker light turns off when background music is off).