

\* This must be done from Station 10 with handset down

## System Telephone Naming

This feature lets you and other system user's with LCD speakerphones know who is calling. You can assign either a personal name or a group name to each system telephone. This name can contain up to seven letters and will show up in the user's display and/or in the called party's display. Typical names could be SRVC, MKTG 1, and K SMITH.

When appropriate programming action has been taken by the installer, the display shows a second line that details the personal intercom number of the calling station.

### *Name the system telephones as follows:*

1. **USE** letter code table on page 87 to compose names for all telephones requiring them (the system accepts up to seven letters per name).
2. **PRESS INTERCOM.**
3. **DIAL** \*#06.
4. **DIAL** the station number of the telephone to be named.
5. **DIAL** # to clear current entry.
6. **DIAL** two-digit codes that correspond to letters in name, for example:

Dialing Codes for "J Smith"						
J		S	m	i	t	h
51	12	73	64	46	84	45

7. **DIAL** \* to continue entering station names (repeat above steps beginning with station selection).
8. **PRESS SPEAKER** to end.
9. **RECORD** names on page 89.

Letter Code Table For LCD Messages							
Character	Code	Character	Code	Character	Code	Character	Code
A	21	S	73	j	54	SPACE	12
B	22	T	81	k	55	;	17
C	23	U	82	l	56	/	18
D	31	V	83	m	64	"	19
E	32	W	91	n	65	.	27
F	33	X	92	o	66	,	28
G	41	Y	93	p	74	:	29
H	42	Z	13	q	14	1	01
I	43	a	24	r	75	2	02
J	51	b	25	s	76	3	03
K	52	c	26	t	84	4	04
L	53	d	34	u	85	5	05
M	61	e	35	v	86	6	06
N	62	f	36	w	94	7	07
O	63	g	44	x	95	8	08
P	71	h	45	y	96	9	09
Q	11	i	46	z	16	0	00
R	72						

LCD Message List (* indicates default message)															
Msg.	Message Text	Letter Codes (max. 16 characters)													
1*	Back At														
2*	Call														
3															
4															
5															
6															
7															
8															
9															
0															