



Why is my DND button flashing and the display showing “Wrap-up Mode” ?

You might have placed your phone in Wrap-up mode. Wrap-up mode is when you need time after a call to complete related paperwork and want another department telephone to receive your calls. To use the wrap-up mode, you must program a Do Not Disturb feature button.

To remove station from wrap-up mode:

1. Press **HOLD**
2. Press **DND** feature button (preprogrammed).

To place your station on wrap-up mode, repeat the above procedure.